
EK Type Support Unit



ROHS REACH


Square Type for Support


Please, download CAD DATA from www.sungilfa.com

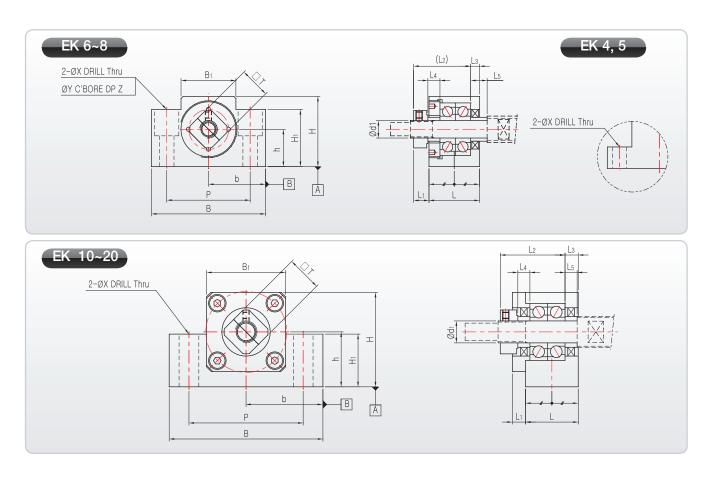

Note

- 1. The surfaces A and B are reference for installation. Please, use the accurate size spacer if adjusting height is necessary.
- 2. Do not disassemble the support unit since the preload of the bearing has already been adjusted.
- 3. Appropriate amount of grease is filled in the bearing of fixed-side support unit.
- 4. Radial ball bearing is in EK-4 and EK-5 and it is suitable for use on portions it where axial load is small.
- 5. Please refer to page 73 about bearing type and characteristic according to Support Unit grade
- 6. Please refer to page 80 for fastening torque of the lock nut.

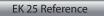

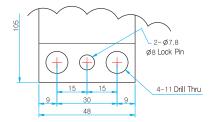

I Init · mm

																			Unit : mm
Model	dı		Lı	L ₂	L3	в	н	b±0.02	h±0.02	B1	Hı	Р	x	Y	z	Collar Size			Mass
No.								0_0.02	11_0.02							L4	L5		(g)
EK4	4	15	5.5	18.5	2	34	19	17	10	18	7	26	4.5	-	-	3.5	3.5	10	50
EK5	5	16 _. 5	6.5	19 _. 5	3.5	36	21	18	11	20	8	28	4.5	-	-	4.5	4.5	11	68
EK6	6	20	5.5	22	3.5	42	25	21	13	18	20	30	5.5	9.5	11	5	7	12	120
EK8	8	23	7	26	4	52	32	26	17	25	26	38	6.6	11	12	5.5	7.5	14	230
EK10	10	24	6	29.5	6	70	43	35	25	36	24	52	9	-	-	5.5	5.5	16	430
EK12	12	24	6	29.5	6	70	43	35	25	36	24	52	9	-	-	5.5	5.5	19	420
EK15	15	25	6	36	5	80	50	40	30	41	25	60	11	-	-	10	10	22	530
EK20	20	42	10	50	10	95	58	47.5	30	56	25	75	11	-	-	11	11	30	1310
EK25	25	48	13	59	14	105	68	52.5	35	66	25	85	(Refer to Drawing) 14			14	35	1950	